



# ProDishwashing

## Best practice guide

### 1.

#### PREPARATION

- ✓ Check that scrap trays are in place
- ✓ Check that drains are closed
- ✓ Fill the dishwasher. Once full, check to ensure the heaters are on
- ✓ Check temperatures, where available, are set to:



RINSE  
55 - 65°C




RINSE  
82 - 90°C

- ✓ Allow washed items to air dry naturally
- ✓ Check detergent and rinse aid product levels - replace if required with Sun 2in1 Dishwasher Detergent & Rinse Aid

### 2.

#### LOADING

- ✓ Remove food scraps from plates and dishes
- ✓ Pour tea and coffee residues down a sink/drain
- ✓ Pre-spray with water where available

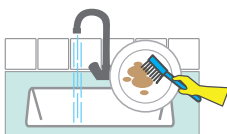

- ✓ Correctly rack all cups over sink or drainer



- ✓ Correctly stack all knives, forks and spoons in the correct baskets. Mix cutlery in each basket, handles down



- ✓ Change wash water at least twice a day
- ✓ De-scale the machine regularly (if needed)

### 3.

#### CHANGE WASH WATER

- ✓ Change wash water at least twice a day (dependant on usage)
- ✓ Switch off dishwasher
- ✓ DRAIN the machine
- ✓ Remove scrap tray(s) and empty into a waste bin
- ✓ Clean scrap tray(s) and filter plate(s) thoroughly
- ✓ Replace filter plate(s) and scrap tray(s)
- ✓ Check all jet nozzles are in place and clear of any blockages



### 4.

#### CHANGING CHEMICAL CONTAINERS

- ✓ Always wear the recommended safety Equipment (gloves and goggles)
- ✓ Carefully withdraw tubing from empty container
- ✓ DO NOT TOUCH END OF TUBE
- ✓ Remove empty container and discard safely
- ✓ Break seal and remove the cap of new container
- ✓ Gently insert the dosing tube
- ✓ Place new product container in position

### 5.

#### CLOSE DOWN

- ✓ Switch off dishwasher
- ✓ Drain machine as box 3
- ✓ Sanitise external surfaces with Cif 2in1 Kitchen Cleaner Disinfectant
- ✓ Allow to air dry with door open

#### PRODUCTS



SUN 2IN1 DISHWASHER  
DETERGENT & RINSE AID



CIF 2IN1 KITCHEN  
CLEANER DISINFECTANT

#### EQUIPMENT



✓ CLEANING CLOTH

#### SAFETY



✓ GOGGLES



✓ GLOVES



#### ProTip

Struggling with cloudy glasses? Hard water can create a film build-up, leading to cloudy glasses. To prevent this from happening, try increasing the detergent dose as well as adding Rinse Aid and Salt to the wash cycle. This will help prevent hard water deposits from building up and your glasses will come out sparkling clean without cloudy films!



[www.proformula.com](http://www.proformula.com)

Cif and Sun are trademarks of Unilever, used by Diversey under license.  
© 2017 Diversey Inc. All Rights Reserved. 65436 en 201/17

Pro Formula By Diversey